

SIMPLY



CODE SUP041

BARCODE 8054242080414

TYPE Telecomandi > Consumer

ITEM Simply

DESCRIPTION Infrared zapper with learning function compatible with any original remote. It needs the working original remote to be programmed. Easy and fast to program. Huge buttons and ergonomic design for the most comfortable user experience. Specifically suggested for aged people and for those who don't want the device settings to be changed. Re-programmable unlimited times. Keeps memory when batteries changing is required. Help Desk service by e-mail within 24-48 hours since your enquiry

SETUP Hold "A" and "P+" buttons to enter the learning mode. Place the original remote pointing the "Simply" remote. Press the button you would like to program on the "Simply" remote. Hold the button you wish to learn from the original remote. Repeat steps to learn any new original function. Press "A" button to exit learning mode. If "B" databank is needed, too, repeat the whole procedure using "B" button in place of "A".

BATTERIES 2x 1.5 V – AAA/LR03 (not included)

PACKAGE 40 pcs.

DIMENSIONS (47,5 x 30,5 x 28,5) cm

WEIGHT 5,0 g

BLISTER CONTENT Remote control, instructions, guarantee



All mentioned product names, logos and brands are property of their respective owners



SIMPLY NUMERIC

CODE SUP040

BARCODE 8054242080407

TYPE Telecomandi > Consumer

ITEM Simply Numeric

DESCRIPTION Infrared zapper with learning function compatible with any original remote. It needs the working original remote to be programmed. Easy and fast to program. Huge buttons and ergonomic design for the most comfortable user experience. Specifically suggested for aged people and for those who don't want the device settings to be changed. Re-programmable unlimited times. Keeps memory when batteries changing is required. Help Desk service by e-mail within 24-48 hours since your enquiry

SETUP Hold "A" and "P+" buttons to enter the learning mode. Place the original remote pointing the "Simply" remote. Press the button you would like to program on the "Simply" remote. Hold the button you wish to learn from the original remote. Repeat steps to learn any new original function. Press "A" button to exit learning mode. If "B" databank is needed, too, repeat the whole procedure using "B" button in place of "A".

BATTERIES 2x 1.5 V – AAA/LR03 (not included)

PACKAGE 40 pcs.

DIMENSIONS (47,5 x 30,5 x 28,5) cm

WEIGHT 5,0 kg

BLISTER CONTENT Remote control, instructions, guarantee



All mentioned product names, logos and brands are property of their respective owners