SUPERÎOR 1 CH-CH+ Universal replacement remote control for all Philips® TVs No programming TV/EXIT PRONTO ALL'USO Telecomando di ricambio universale: sostituisce il vostro telecomando Philips[®]. Non richiede programmazione. ŵ 1 P PRÊTE À L'EMPLOI II, Télécommande universelle de remplacement pour Philips®. Sans programmation. 1.e 2_{ABC} 3DEF **FUNCIONA DE INMEDIATO** Mando universal de recambio para todos los TV Philips®. No requiere programación. 5_{JKL} **6**MNO 9wxrz **8**_{TUV} 0_ TEXT READY SUPERÎOR

PHILIPS SMART TV REPLACEMENT

CODE SUPTRB010

BARCODE 8054242080346

TYPE Remote Controls > Consumer

ITEM Philips Smart TV Replacement

DESCRIPTION Infrared universal remote control

compatible with all the Philips TVs produced after year 2000. Ready to use: no programming necessary, just select the desired databank. All of the standard and the smart functions of your original remote are included. Help Desk service by e-mail within 24-48 hours since your enquiry

SETUP Insert batteries, select the databank ("A",

"B", "C") which works the best with your

Philips TV and enjoy it.

BATTERIES 2x 1.5 V - AAA/LR03 (not included)

PACKAGE 40 pcs. box divided into 4 inner boxes (10

pcs./inner box)

DIMENSIONS 34x30x31,5 cm

WEIGHT 5.8 kg

BLISTER Remote control, instructions, guarantee

CONTENT



