

**1**



**2**



Make sure Usb-Programmer and Superior Remote are on the same level.

## tips and tricks



Never use usb-hub (multi-usb) to connect Usb-Programmer to your PC.



Always connect the Usb-Programmer directly to the usb port of your PC.